

MOVES® SLC™ Maintenance Levels

10-Level (Operator)

Referenced from MOVES® SLC™ Operator Manual 124826 REV O

Section (Operator Manual)	Task	Page	Kit P/N
16.2	System Cleaning Procedures	331	N/A
16.3.5	Exercising the Oxygen Concentrator	340	N/A
16.3.6	Battery Charging	340	N/A
16.3.2	Ventilator Filter	333	125940
16.3.3	Hydrocarbon Filter	335	124354
16.3.4	Ventilator Liner	337	127407

*No tools required

20-Level (Unit)

Referenced from MOVES® SLC™ Service Manual 125784 REV G


Section (Service Manual)	Task	Page	Kit P/N
13.0	Service Testing	140	125973

*Requires MOVES® SLC™ Service Support Kit and test equipment as outlined on the MOVES® SLC™ Sustainment Site.

30-Level (Direct Support/Service Depot)

Referenced from MOVES® SLC™ Service Manual 125784 REV G

Section (Service Manual)	Task	Page	Kit P/N
8.1	Ventilator Assembly	34	127402
8.2	Patient Monitoring Drawer	45	127401
8.3	User Interface	51	127403
8.4	Oxygen Concentrator	56	127404

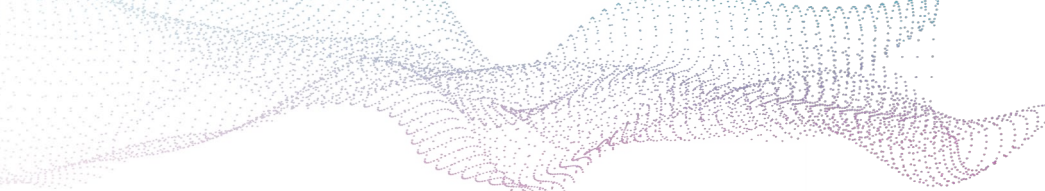

9.1	Cooling Fan Air Filter	65	127399
9.2	Ventilator Bag	69	125943
9.3	Oxigraf Calibration & Patient Gas Sampling Filters	79	127399
9.4	Sampling Pump, Internal Nafion Tube, and Patient Gas Sampling Filters	83	125946
9.5	Suction Filter	91	127399
9.6	Cooling Fan	94	127405
9.7	Battery Door	98	128042
9.8	Ventilator Port Covers	104	128043
10.7	Calibration	114	125973
12.0	Updating Masimo Board	132	N/A
13.0	Service Testing	140	125973
17.0	ATF Module Removal/Replacement	195	127400

*Requires MOVES® SLC™ Service Support Kit, hand tools, and test equipment as outlined on the MOVES® SLC™ Sustainment Site.